

AGASO

CUSTOM EQUIPMENT

E STOPP & BRACKET INSTALLATION INSTRUCTIONS

Thank you for your purchase from Agaso Outdoor. Our it is our mission to develop and produce the highest quality components for the highest level of satisfaction.

TOOLS NEEDED

1. 7/16" box or gear wrench
2. 3/8" box or gear wrench
3. 5/16" socket wrench with 3" extension
4. .155" drill bit and drill
5. Scribe or pen to indicate hole placement to drill

INSTALLATION INSTRUCTIONS

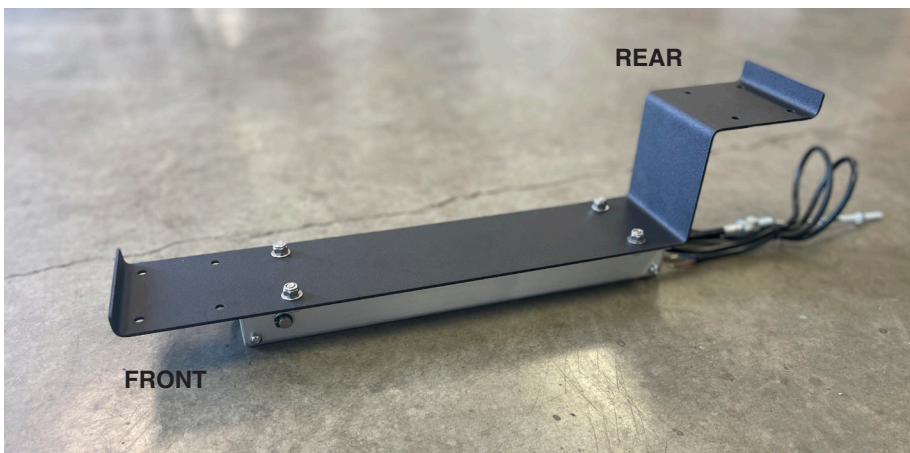


Image 1



Image 2


Step 1: Mount the E-Stop to the bracket as pictured above, with the wiring side toward the front and cable retractor side at the rear. Make sure the hardware does not protrude much further than the end of the nylock nut once mounted to the bracket. Recommend to mount the end of the E Stop flush to the vertical bend of the bracket as pictured in image 2.

Step 2: Dry fit the bracket on your Bronco body to confirm fitment. Make sure to mount it so it clears your frame rail and exhaust. Mark the 8 mounting holes (4 front + 4 rear) placement with a scribe or pen. See next page for additional reference diagram and image.

Step 3: Drill all 8 holes, with placement indicated in previous step, with the drill bit in preparation to mount the bracket with supplied sheet metal screws.

Step 4: Fit bracket back up to body and fasten sheet metal screws with a socket wrench.

FRONT

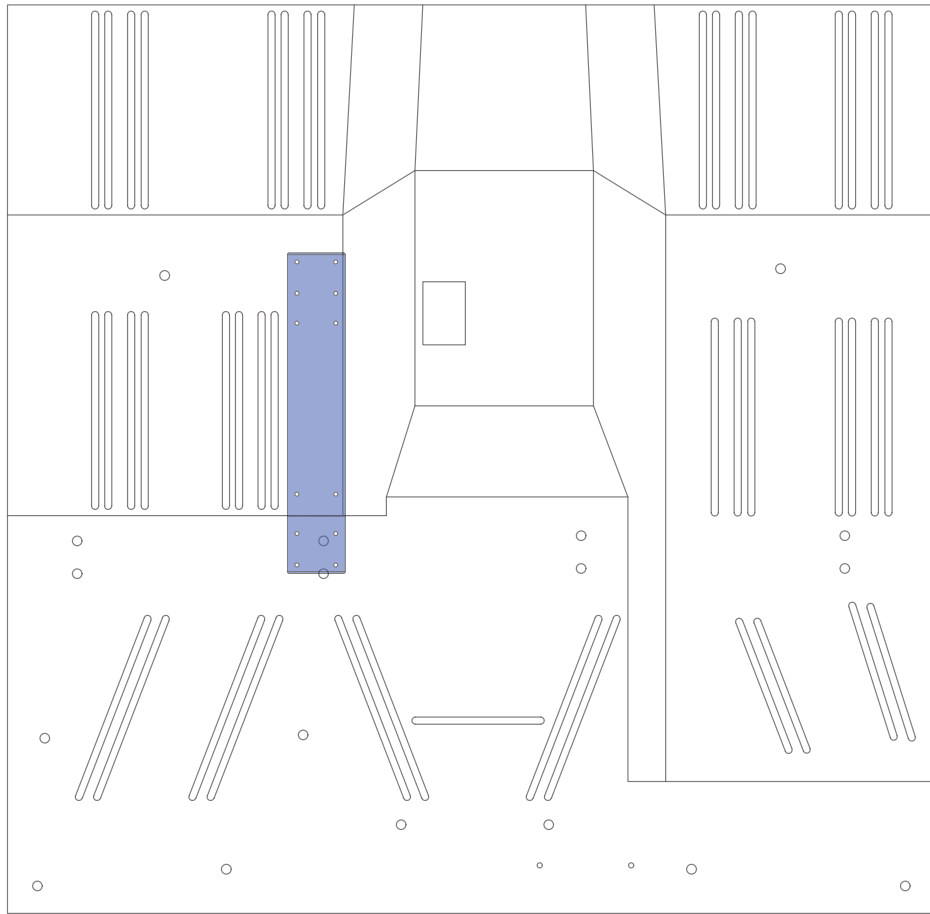

REAR



View of driver side, from rear looking toward front of vehicle.